
**First-Last.... shelf positions**

1. Control panel
2. Cooling fan* (not visible)
3. Top heating element
4. Oven light
5. Bottom heating element (not visible)
6. Door hinge
7. Oven door

***N.B.:** The cooling fan switches on only when the oven has reached a certain temperature. After the oven switches off, the cooling fan may, however, continue to run for a certain time to ensure proper cooling.

Important: An optional kit consisting of an oven door glass and of relevant mounting components, is available by the After-Sales Service. The use of the kit reduces the temperature of the outer oven surface and is strongly recommended if there are kids in the house. Code N° 4819 310 39186.



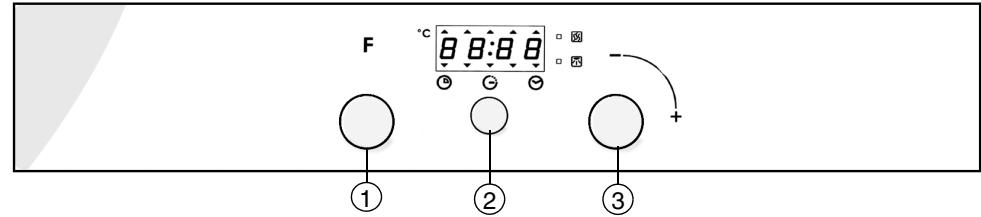




1. Selector knob: to choose the oven functions.
2. Button to select and confirm the different operations (operate by single presses only).
3. Knob to set: time of day, cooking time, the time at which cooking should terminate, the temperatures, the power levels and the cooking times (Function P).

ACCESSORY

(Depending on the model) • Grid

OVEN FUNCTIONS TABLE

Function symbol	Function	Preset temperature/level	Function description (see details in the user's manual)
0	OVEN OFF	-	-
	OVEN LIGHT	-	To switch on the oven light.
	MLTF (Heat Maintenance)	35C	To keep a constant temperature, either 35°C or 60°C.
	BOTTOM HEATING	-	To use the last 10-15 minutes of cooking time.
	STATIC	200C	To cook food at one shelf level. Preheating.
	GRILL	3	To grill small pieces of meat, toast, etc....

STARTING THE OVEN








When the oven is connected to the power supply for the first time, or re-connected after a power failure, *the display shows "5E0P"*.

To start the oven:





- turn **knob 1** to "0".
- press **button 2**. *The display shows "--:--".*

FOR A DESCRIPTION ON HOW TO USE THE OVEN, PLEASE REFER TO THE PROGRAMMER DESCRIPTION SHEET.





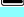

FOOD COOKING TABLES

FOOD	Function	Preheating (10 minutes)	Level (from the bottom)	Temperature (°C)	Cooking time (minutes)
MEAT Lamb, Kid., Mutton		X	2	200	60 - 80
Roast (Veal, Pork, Beef) (kg. 1)		X	2	200	70 - 90
Chicken, Rabbit, Duck		X	2	200	70 - 80
Turkey (kg. 6) + level. 3 browning		X	1	200	160 - 180
Goose (2 Kg)		X	2	200	120 - 130
FISH (WHOLE) (1-2 kg) Gilt-head, Bass, Tuna, Salmon, Trout		X	2	200	60 - 70
FISH (CUTLETS) (1 kg.) Sword Fish, Tuna, Salmon, Cod		X	2	200	45 - 55

NOTE: When cooking meat using fan-assisted and static functions, it is also advisable to use the Browning function (level 1 to 3).

FOOD	Function	Preheating (10 minutes)	Level (from the bottom)	Temperature (°C)	Cooking time (minutes)
VEGETABLES Stuffed peppers		X	2	190	35 - 45
Stuffed tomatoes		X	2	200	50 - 55
Baked potatoes		X	2	200	40 - 50
Raw vegetables au gratin (e.g. Fennel, Cabbage, Asparagus, Celery)		X	2	200	35 - 45

COOKING TABLE FOR GRILL FUNCTION

FOOD	Function	Preheating (5 minutes)	Level (from the bottom)	Browning level	Cooking time (minutes)
Toasts		X	5	4	2 - 35
Pork chops (N° 4)		X	5	3	30 - 35
Sausages		X	5	3	30 - 35
Bacon rasher		X	5	4	10 - 15
English breakfast		X	5	3	30 - 40
Spits		X	5	3	25 - 35

FOOD	Function	Preheating (10 minutes)	Level (from the bottom)	Temperature (°C)	Cooking time (minutes)
SWEETS, PASTRIES, ETC. Raising cakes (sponges)		X	2	160	30 - 40
Filled pies (with cheese)		-	2	180	90 - 95
Tarts		X	2	180	25 - 35
Apple strudel		X	2	200	40 - 45
Biscuits		X	2	180	20 - 30
Cream puffs		X	2 - 4	190	25 - 35
Savoury Pies		X	2	200	50 - 55
Lasagne		X	2	200	45 - 55
Filled fruit pies e.g. Pineapple, Peach		X	2	200	35 - 45
Meringues		X	2	90	120 - 150
Vol-au-vents		X	2	200	15 - 25
Soufflés		X	2	190	30 - 40